


# Freshbox Installation Manual

**Step 1: Take out the packing carton and unpack it.**



## Step 2: Take out the parts.

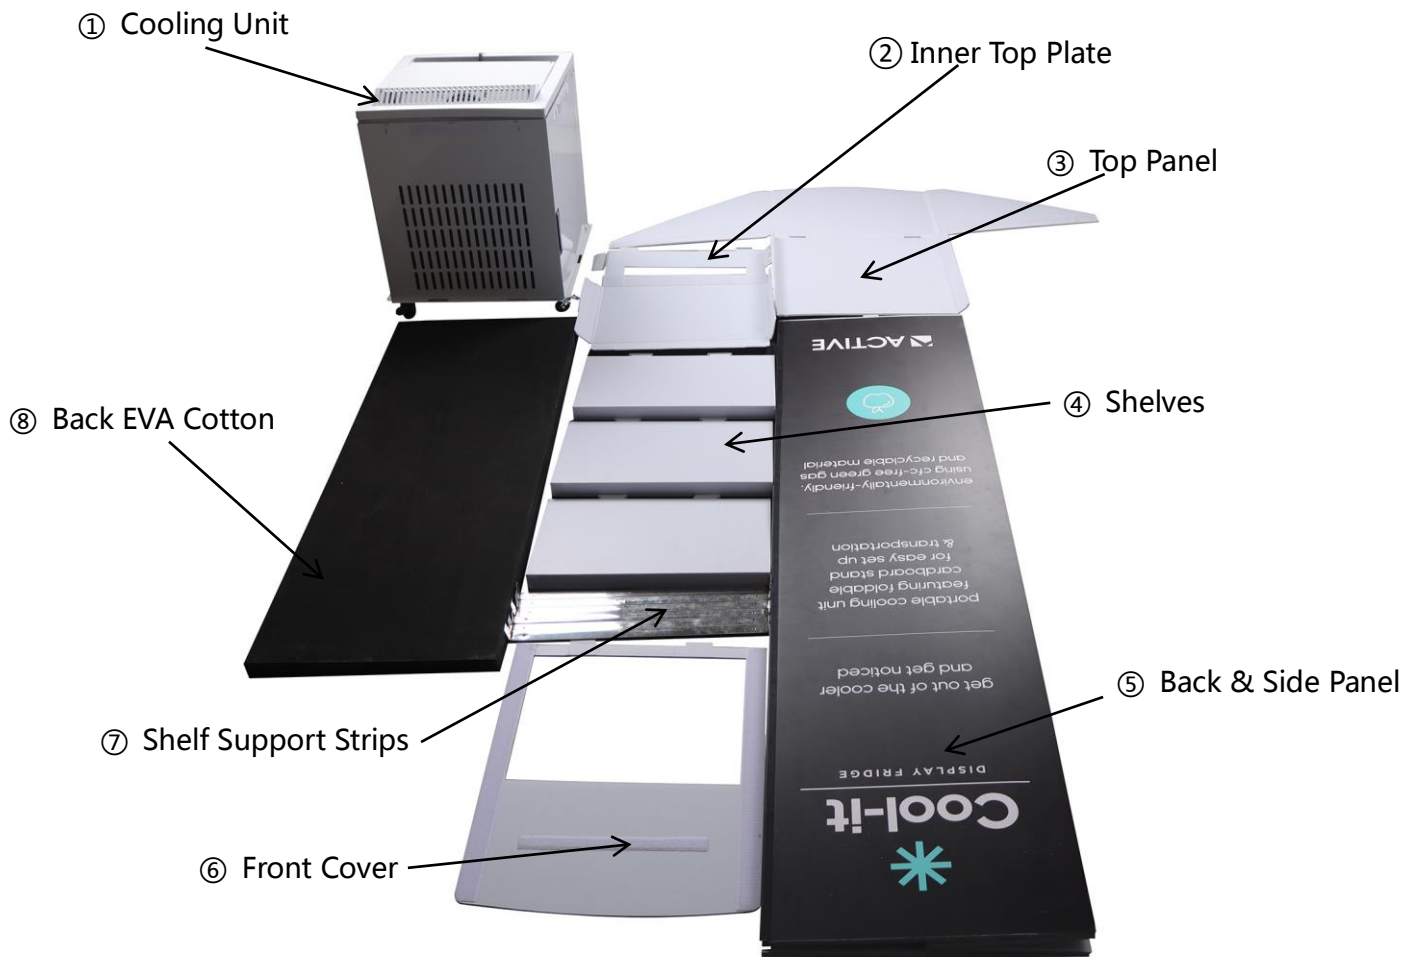


**Step 3: Take out the cooling unit**



**Step 4.1: Take out the back & side panel and unfold it.**




**Step 4.2: Put the back & side panel on the cooling unit from back to front.**

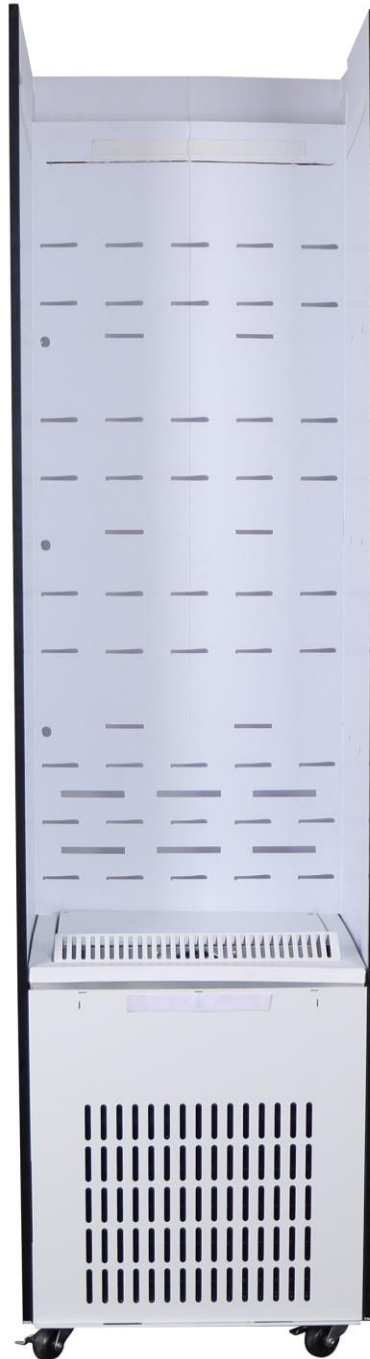


**Step 4.3: As shown in Figure 1-1.1, pull the power cord out of the vent of the back panel.**

**As shown in Figure 1-1.2, insert the bolt of the back panel into the corresponding hole of the cooling unit.**

**As shown in Figure 1-1.3 and 1-1.4, insert the clamp strip to the side edge of the cooling unit and side panel**

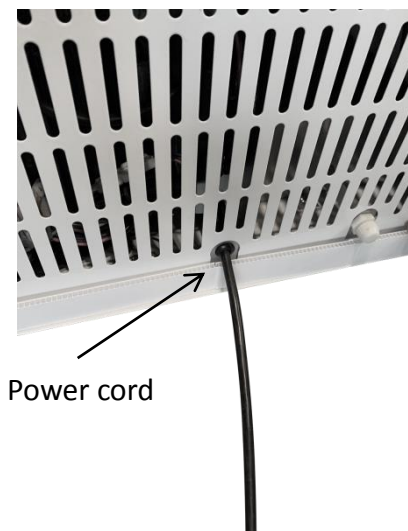

**Figure 1-1.1**

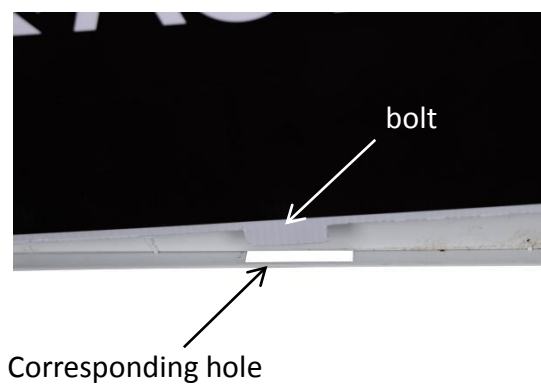

**Figure 1-1.2**



**Figure 1-1.3**



**Figure 1-1.4**

**Step 4 The effect is shown in the below figures.**



**Step 5.1: Take out the shelf support strips.**





**Step 5.2: Insert the shelf support strip as shown in Figure 2-1.1  
1~2-1.4.**



**Figure 2-1.1**



**Figure 2-1.2**



**Figure 2-1.3**



**Figure 2-1.4**

**Step 5.3: Complete 6 support strips as described above, and the effect is shown in the figure.**




**Step 6.1: Take out the top panel.**



**Step 6.2: Remove all Velcro film.**



**Step 6.3: Bend along the crease as shown in the below figures.**

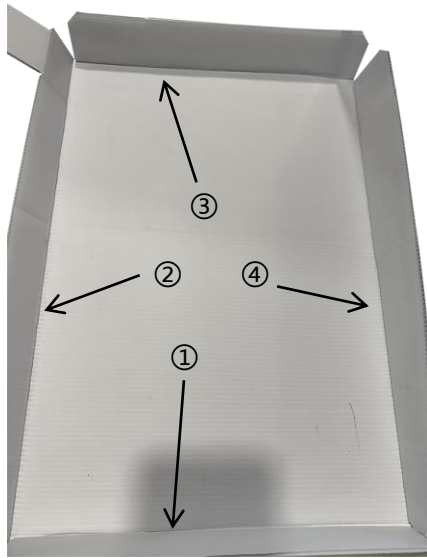

**Step 6.4: Paste the edge of the top panel along a straight line**




**Step 6.4 The effect is shown in the below figures.**



**Step 6.5: Bend the front end of the top panel.**



**Step 6.6: Paste the front end of the inner top panel, and the upper end and the front end are flat with the main back panel as shown in the figure.**

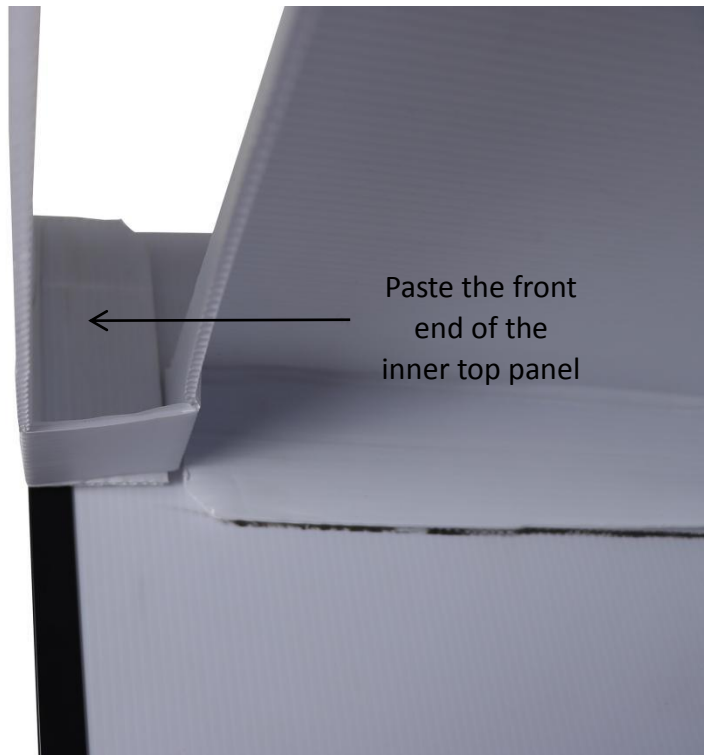





**Step 6 The effect is shown in the below figure**



**Step 7.1: Take out the back EVA cotton.**



**Step 7.2: Insert the EVA cotton into back panel as shown in the below figure**

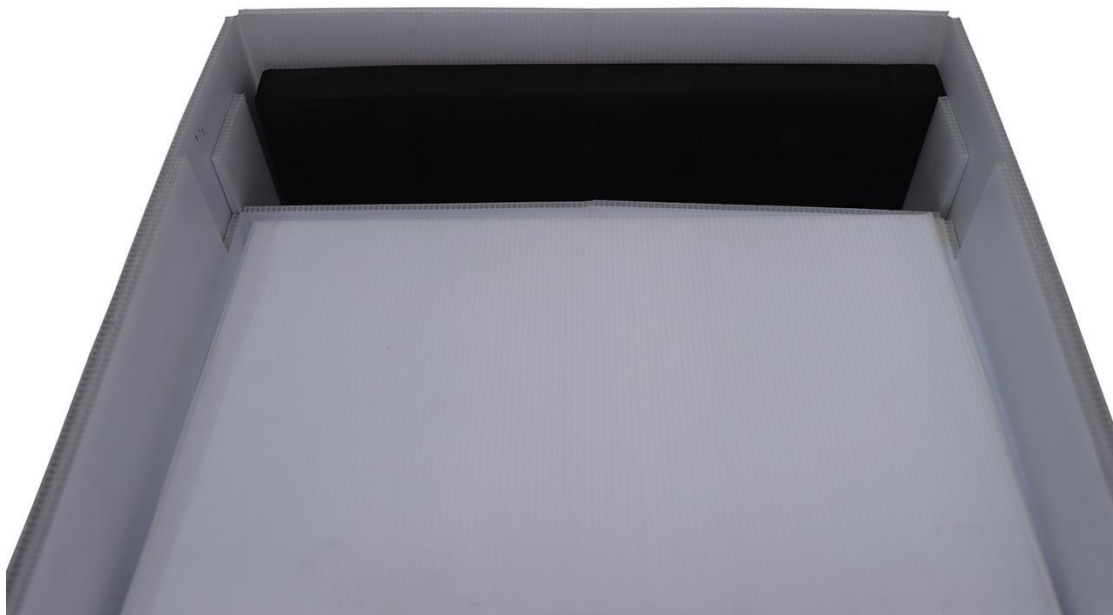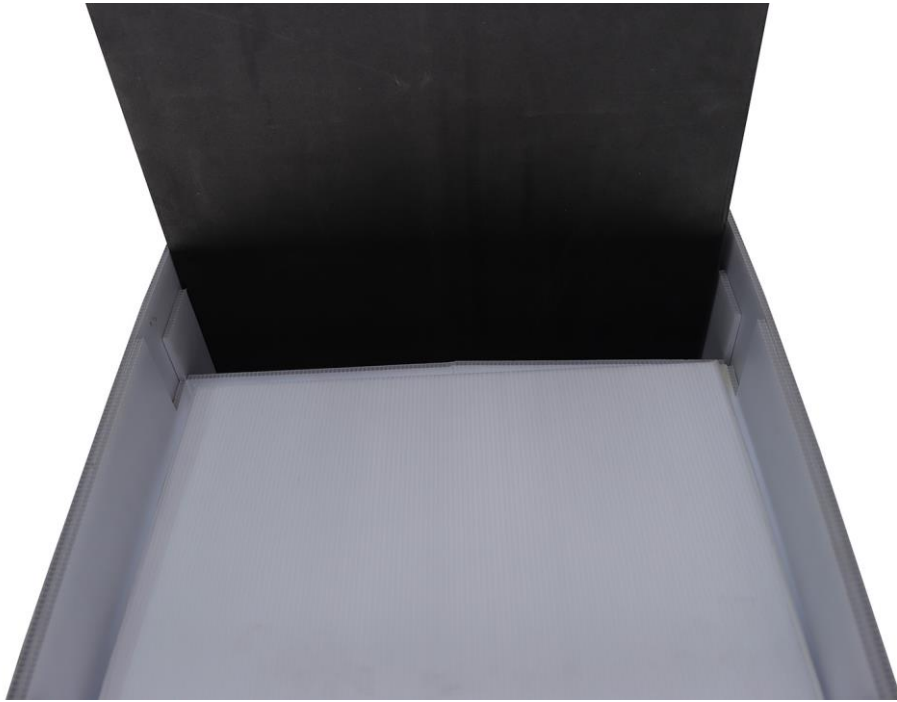

**Step 8.1: Take out the top panel.**



**Step 8.2: Remove the Velcro film.**



**Step 8.3: Bend the top panel along the crease as shown in the figure, and stick the side of the top panel flat with the back**




**Step 8.3 The effect is shown in the below figure.**





**Step 8.4: Align the hole of the top panel with the bolt as shown in the figure and put it into the empty position of the top panel.**

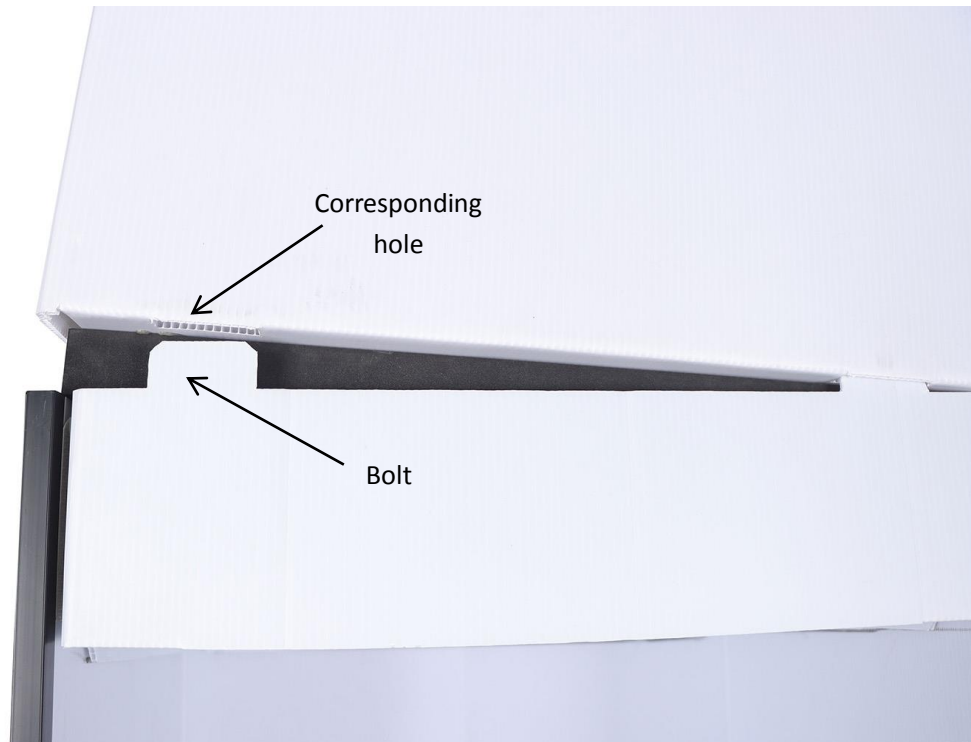



**Step 8.3 The effect is shown in the below figures.**



**Step 9.1: Take out the shelves.**



**Step 9.2: Put them on the shelf support strips, and align the buckles with the buckle holes.**



**Step 9.3: Insert the shelves into the back panel.**




**Step 9: The effect is shown in the below figure.**



**Step 10.1: Take out the front cover.**



**Step 10.2: Insert the front cover into the hole and stick the front cover.**

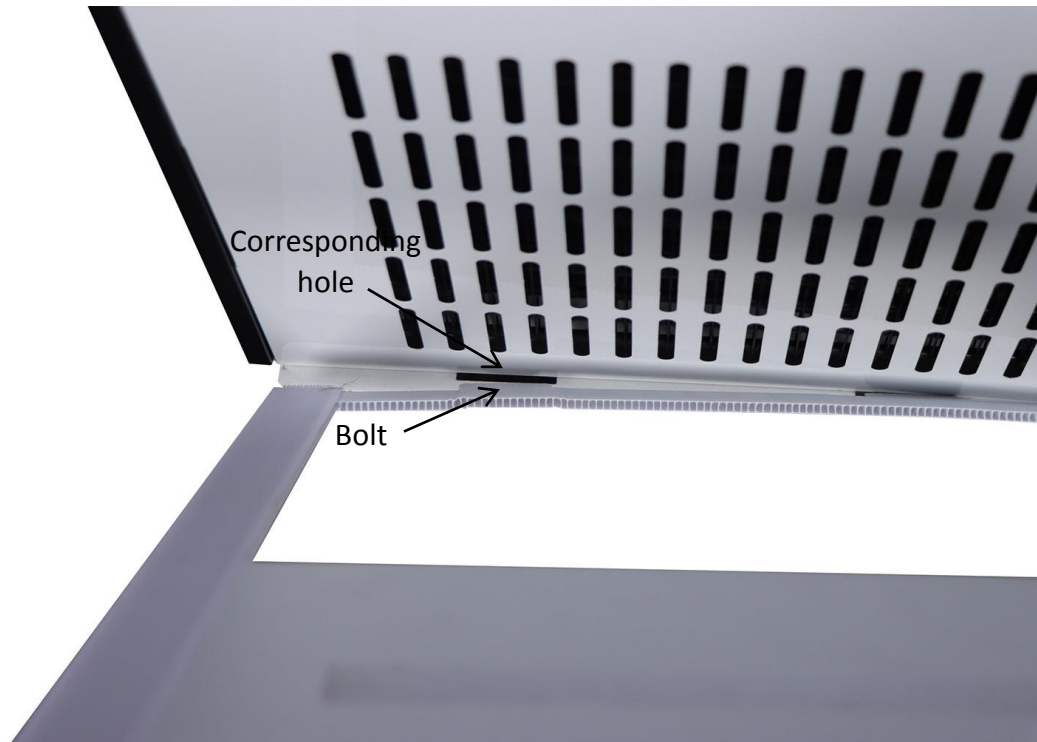

**The final effect is shown in the below figures.**

